

# How to Set SMTP (WEB 3.0)

## 1. Product Model and Firmware Version

This tutorial is based on WEB 3.0 firmware, Interface may vary on some models and firmware.

## 2. SMTP


Configure email parameter and enable email linkage. The system sends email to the defined address when the corresponding alarm is triggered

## 3. Operation Description

### Step 1. Login Device.



### Step 2. Select Setting > Network > SMTP (Email).

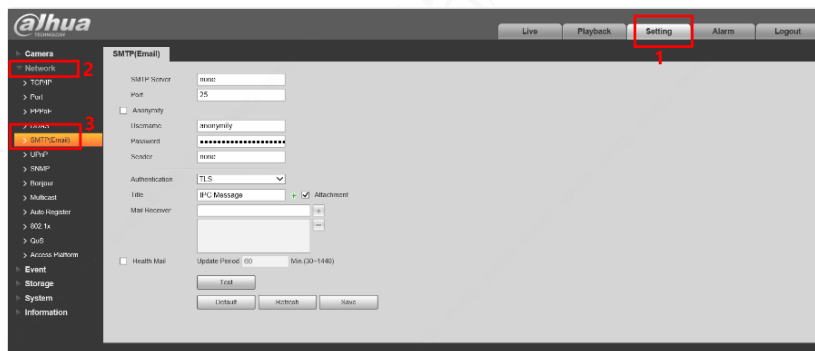

### Step 3. Description of SMTP (Email) parameters

SMTP Server	none
Port	25
<input type="checkbox"/> Anonymity	
Username	anonymity
Password	.....
Sender	none
Authentication	TLS
Title	IPC Message
Mail Receiver	
<input type="checkbox"/> Health Mail	
Update Period	60 Min.(30-1440)

<b>Parameter</b>	<b>Description</b>
SMTP Server	SMTP server address
Port	The port number of the SMTP server.
Username	The account of SMTP server.
Password	The password of SMTP server
Anonymity	Select the check box, and the sender's information is not displayed in the email.
Sender	Sender's email address.
Authentication	Select Authentication from None, SSL and TLS
Title	Enter maximum 63 characters in Chinese, English, and Arabic numerals. Click + to select title type, including Name, Device ID, and Event Type, and you can set maximum 2 titles
Attachment	Select the check box to support attachment in the email
Mail Receiver	Receiver's email address. Supports 3 addresses at most
Health Mail	The system sends test mail to check if the connection is successfully configured. Select Health Mail and configure the Update Period, and then the system sends test mail as the set interval.