

How to Set SMTP (WEB 5.0)

1. Product Model and Firmware Version

Configure email parameter and enable email linkage. The system sends email to the defined address when the corresponding alarm is triggered. This tutorial is based on WEB 5.0 firmware.

Interface may vary on some models and firmware.


2. Operation Description

Step 1. Login Device.



Step 2. Select Setting > Network > Email (SMTP).

Description of Email (SMTP) parameters

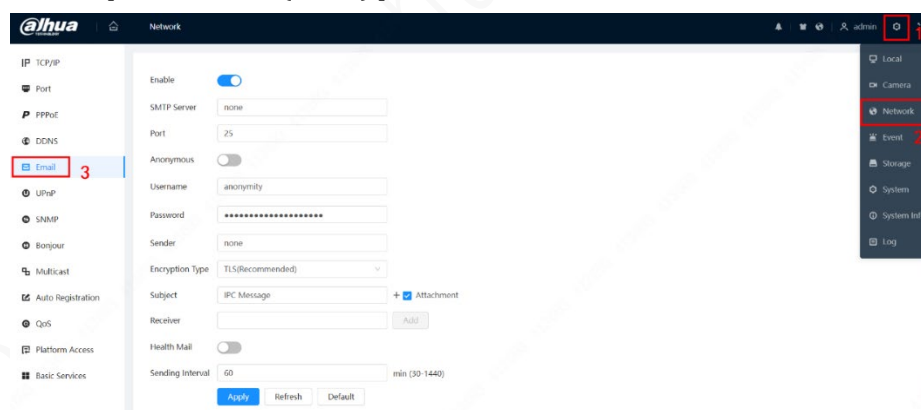

Parameter	Description
SMTP Server	SMTP server address
Port	The port number of the SMTP server.
Username	The account of SMTP server.
Password	The password of SMTP server
Anonymity	Select the check box, and the sender's information is not displayed in the email.
Sender	Sender's email address.
Authentication	Select Authentication from None, SSL and TLS

Title	Enter maximum 63 characters in Chinese, English, and Arabic numerals. Click to select title type, including Name, Device ID, and Event Type, and you can set maximum 2 titles
Attachment	Select the check box to support attachment in the email
Mail Receiver	Receiver's email address. Supports 3 addresses at most
Health Mail	The system sends test mail to check if the connection is successfully configured. Select Health Mail and configure the Update Period, and then the system sends test mail as the set interval.

Step 3. Click Apply. Or use Default to restore all settings.

403908 da hua 2023-10-30